

pellon[®]

*The Magic
in the Middle*

Victorian Room Screen Skill Level: Beginner

Designed By Pellon[®]
Website: www.PellonProjects.com



Create an elegantly appliqued and hand painted screen to add interest and class to any room.

Materials Needed:

- 4 yds. 725 Wonder-Under[®] Heavy-Duty
- 6 yds. 805 Wonder-Under[®]
- 2 pkgs. 5/8"ST805 Wonder-Under[®] Tape
- 2 yds. 987F Fusible Fleece
- 6 yds. 809 Décor-Bond[®]
- 8 – 5ft lengths of ½" diameter PVC pipe
- 12 – ½" diameter PVC corner turns
- 6 yds. background fabric
- 2 yds. printed applique fabric
- 12 yds. braided trim
- 6 – 1" brass hinges
- Dimensional fabric paint in complimentary colors

Tools Needed:

- Hack saw
- Screwdriver
- Scissors
- Iron and ironing board

Frame Construction:

1. Cut 2 of the 5 ft. piping pieces into 20" lengths to produce 6 total pieces.
2. Slide corner pieces on 5 ft. lengths and slide 20" pieces on top and bottom to form 3 rectangular frames. (See Fig. A)

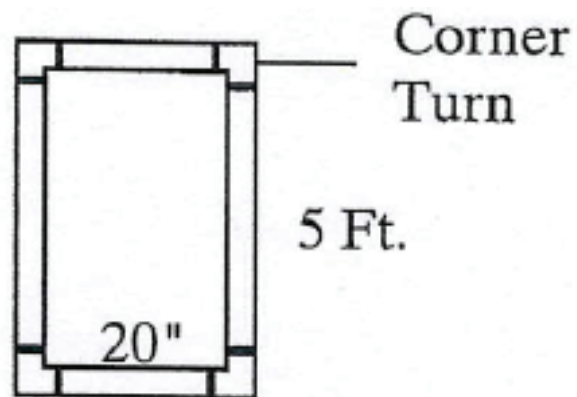


Fig. A

Panel Backs:

1. Cut 3 panels of the background fabric measuring 31" wide by 71" high.
2. Cut Décor-Bond® the same size as each of the panels. Fuse Décor-Bond to the wrong side of the background fabric according to manufacturer's directions.
3. Cut 6 strips of Wonder-Under® Heavy-Duty measuring 4" wide by 71" high, and 6 strips measuring 4" wide by 31" high. Press to the outer edge of the wrong side of the background fabric.
4. Cut 6 strips of Fusible Fleece measuring 3" wide by 63" high, and 6 strips measuring 3" wide by 17" high. Align Fusible fleece to inside edge of Wonder-Under® and fuse to wrong side of background fabric. (See Fig, B)
5. Remove paper backing from Wonder-Under®.
6. To attach the panel backs to the frame, lay the frame on top of the wrong side of the background fabric, fold edges over frame (so wrong sides are facing each other), and fuse edges. Repeat for other 2 panels.

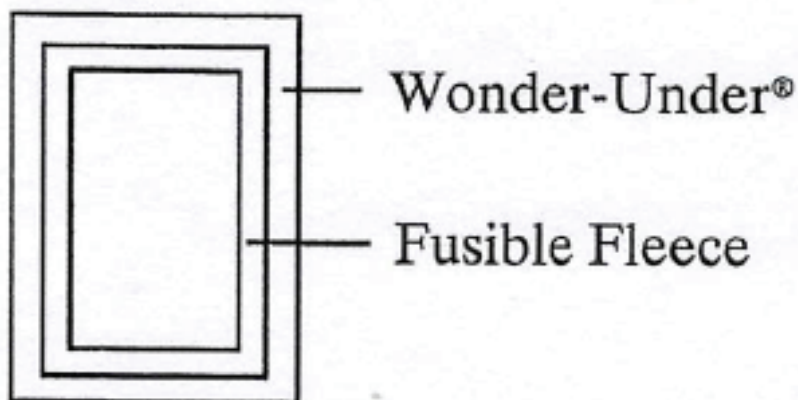


Fig. B

Panel Fronts

1. Cut 3 panels of the background fabric measuring 222" wide by 62" high.
2. Cut Décor-Bond® the same size as the panels. Fuse the Décor-Bond® to the wrong side of the background fabric.
3. Cut 6 strips of Wonder-Under® Heavy-Duty measuring 2" wide by 62" high and 6 measuring 2" wide by 22" high. Fuse to the outer edge of the wrong side of background fabric.
4. Fuse Wonder-Under® to wrong side of applique fabric. Cut out desired shapes. Remove paper backing and "fuse baste" shapes to panel front by applying iron for only a few seconds so appliques can be repositioned. Once the desired look is achieved, cover shape with a damp press cloth and fuse completely.
5. Press 5/8" Wonder-Under® Tape to the back of decorative braid. Remove paper backing and fuse braid 4" from edges of panel fronts.
6. Embellish appliques with dimensional fabric paint. Let dry overnight.
7. Peel off paper backing of Wonder-Under®.
8. Lay Panel front on top of frame and fuse edges around frame.

Final Assembly:

Screw 3 hinges between each panel. HINT: To help screws penetrate the PVC, use a nail smaller than the screw being used to punch a starter hole.